 


Delete  
Print job

## GDPR

Do not leave printing job in the job list.

If no more paper or no toner

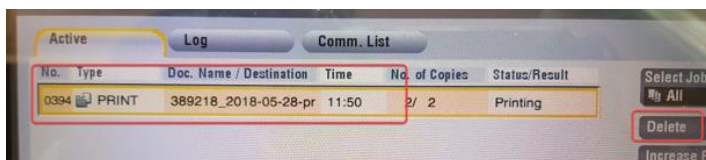

Delete printing job:

Press "Job List" – in top right corner of main screen

Select job printing and press "Delete" button


Tray 3

Error C-0214

Paper tray 3 – A4 ONLY  
NO A3 paper

Do not block the yellow bar

 Remember to place paper correct.

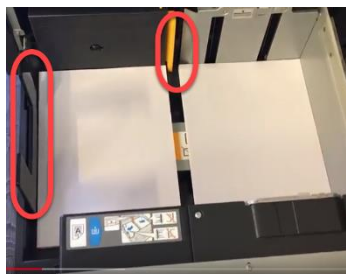

Paper tray 3: A4 paper ONLY

How to correct Error C-0214

1: Do not block yellow bar.

2: The black guide has to be to the left.

3: Open front and close door

It can be necessary to power-cycle the machine

Scan all  
pages to  
one mail

When Scanning more than one document using the glass plate, you need to change job setting. After selecting "Fax/Scan" button and selecting E-mail Me icon Choose **Application/Program** in bottom right corner of the screen

Now find the menu called **No. of original/Antal originaler**



and set **Separate scan/Separat scan** to **ON/TIL** and press **ON/V**



Now press the **Start button** to scan all the separate pages into one job.



When you are finished building the job, touch **Finish** and press the **Start button** again

Now all the pages will be sent to your e-mail as one file.

Power  
cycle

When card reader not working.

OR

After power outlet in order to get correct network connection.



Power button behind front door #2 – below toner door